


Vivitar[®] accessories

User's Manual

SLR Photo & Video Tripod/Monopod




Item: VIV-MPT-600

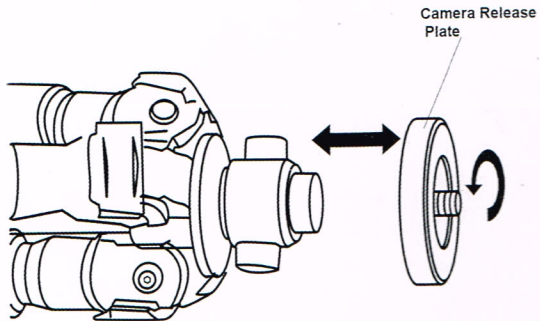


1

Warning: pay close attention when attaching the tripod's camera release plate to the body of the tripod. Be absolutely sure that the plate is securely attached to the tripod. Failure to do so could lead to your camera falling off of the tripod and possibly breaking.

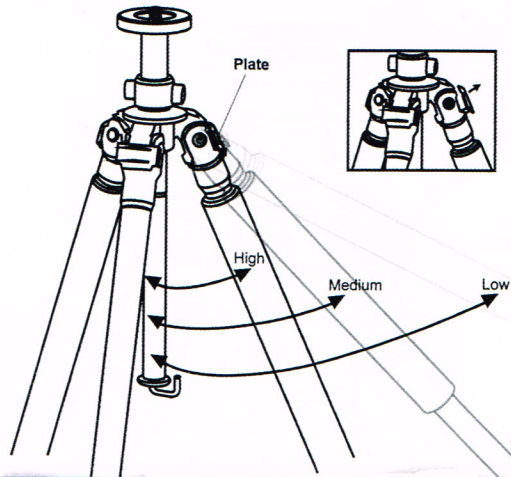

2

Pull the appropriate plate outwards to allow you to spread the tripod's legs wider apart. This will allow you to get your camera lower to the ground.

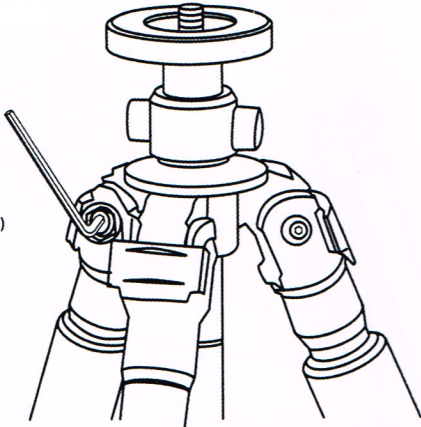


wrench
(not included)

A line drawing of a tripod head. A wrench is shown inserted into a bolt on the side of the head, which is used to adjust the tension of the plate. The tripod legs are partially visible at the bottom.


3

If the plate becomes too tight or too loose, you can use a wrench to adjust the bolt before spreading the tripod's legs out.

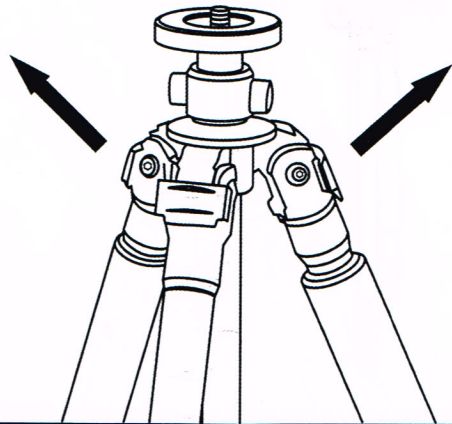


4

You cannot spread apart the tripod's legs, so that your camera is extremely low to the ground, unless the plates are pulled outwards.

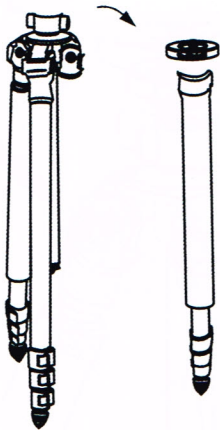


5

One leg can be converted to a monopod.

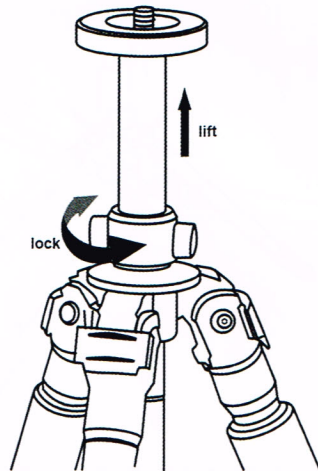


6

After lifting the central shaft column, lock the center column collar to prevent your camera from slipping abruptly or falling.

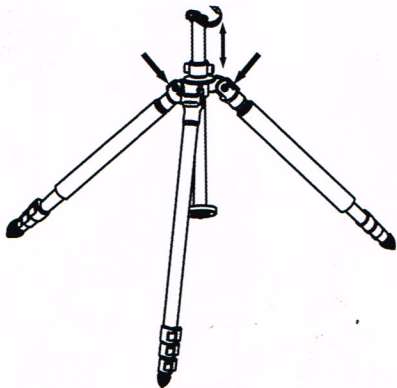


7

When the tripod's legs are fully spread and the camera is closest to ground level, press the plates inwards to secure and lock the tripod in position. Remove the center shaft hook located at the bottom of the column before lifting the center column.

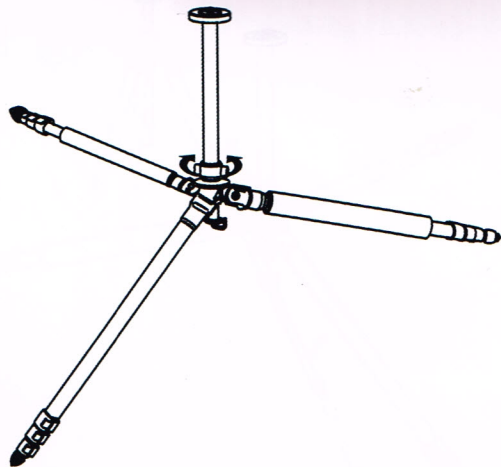


8

After adjusting the tripod and center column, please lock the center column collar to prevent shaking or dislocation of position.

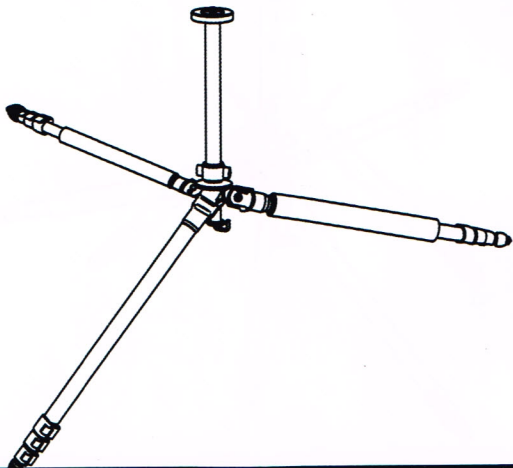


9

The tripod can be adjusted so your camera is positioned very close to the ground.

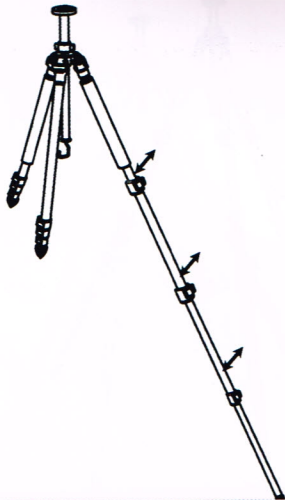


10

The tripod's legs have buckles. When the buckles are loosened the legs can be extended. Fasten the buckles securely to lock the legs in place.

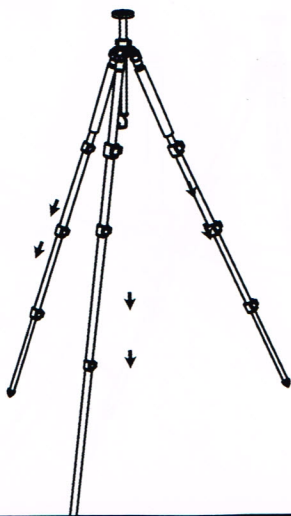


11

Once the buckles are unfastened, the legs of the tripod can be extended.

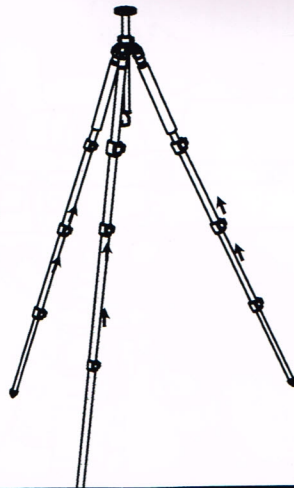


12

Loosen the buckles to retract the tripod's legs. Once fully retracted, fasten the buckles to keep the legs in place.

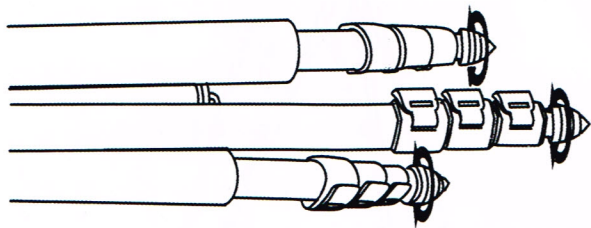

13

Rotate any of the tripod's feet and a nail will be exposed. This nail will help secure the tripod on less solid surfaces like grass.

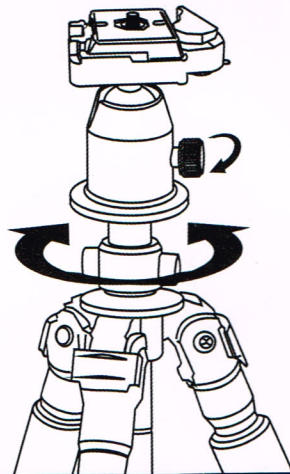

14

Turn the knob below the camera's release plate to make it easier to rotate the camera 360°.

Vivitar Warranty Card

Vivitar Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

For further information on your product's one year warranty, you may also visit www.vivitar.com for or call our technical support department toll free at 1-877-397-8200 in the US, or 0-800-917-4831 in the UK.

Please keep a copy of your original bill of sale in order to guarantee applicable warranty service.

Vivitar®

www.vivitar.com

©2012 Sakar International
195 Carter Drive,
Edison, NJ 08817
Support: 800 592 9541

Sakar/Vivitar UK
2D Siskin Parkway East
CV3 4PE, UK
Support: 0800 917 4831

