 


INSTALLATION NOTE MANUAL

Model No. **TF1301**
TF1301WHT

Series No. **YL-2310A**

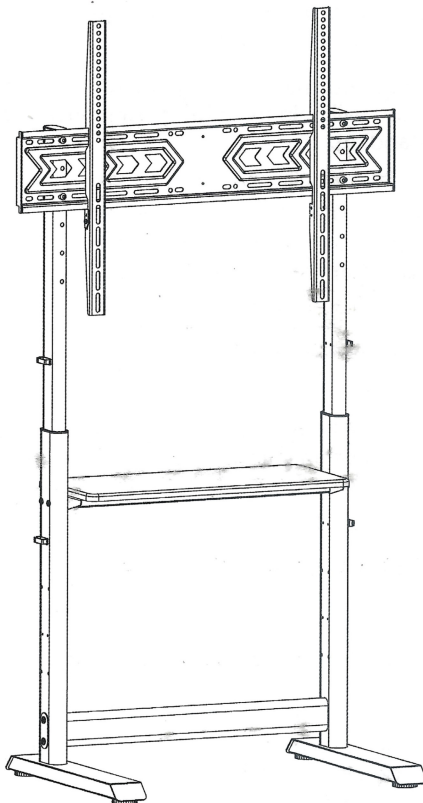

CUSTOMER SERVICE SUPPORTS

CONTINENTS

North America

US CA MX

Europe

UK DE FR IT ES

Asia

JP CN IN

CONTACT DETAILS

1 626 400 2997
(CST 8AM - 5PM Mon.-Fri.)

MAILBOX

cs@rfiver.com

eucs@rfiver.com

jpcs@rfiver.com

TV Weight Limit:
DO NOT EXCEED



THANK YOU FOR PURCHASING

SERVICE CARD

We strive to make sure each piece of furniture you receive is perfect and that all parts and hardware in the parts list are included in your package.

However, if there are any missing or damaged parts, please do not return your product to the place of purchase. Instead, please contact us. We will do our best to solve your problem and send the replacement parts to you as soon as possible from our local customer service center.

- **Please have the following information ready when you contact us.**
Your detailed information will help us to bring you much more effective service.
Thank you for understanding.

1. **Order ID.** - Found in your order details of the online shopping platform you used when purchasing
2. **Model No.** - Found in the upper right corner of the manual cover, or use the SKU no. in the order details
3. **Series No.** - Found in the upper right corner of the manual cover
4. **Place of Purchase/Shipping Platform:** Amazon, Walmart, Ebay, etc.
5. **Statement of the Problem:** Please advise us specifically of the problem you are encountering so that we can offer correct solutions.

NOTICE



Please read this assembly manual carefully and make sure you have all the parts in the list before you begin to install.
Meanwhile, please keep this assembly manual for future reference.



Please move the furniture gently with **2** persons.



Please protect the furniture by placing all parts on a soft surface during assembly.



Please don't place very warm/cold objects on top of any surface, clean immediately with microfiber cleaning cloths/towels if any liquids are left on the surface.
Never use multi-surface furniture polish spray or cleaner.
Do not touch the surface with a hard/sharp object that may cause scratches or broken.




Adult supervision required.
Keep little parts of furniture far away from the children.

Do not allow children to climb onto the furniture.
Improper use or incorrect assembly may cause death or serious injury.
Use extra safety straps to ensure the best tip-over protection.


Do not use this product for any purpose or in any configuration not explicitly specified in this instruction.
We hereby disclaim any liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.

PARTS LIST


1 x2

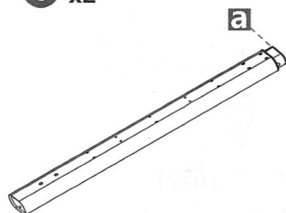

2 x2

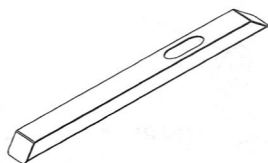


3 x1

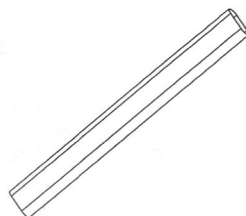 


4 x1



 5 x1

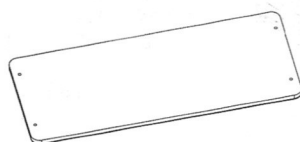

6 x1

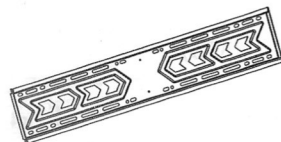 

7 x2



 
8 x2



9 x2



10 x4



Adjustable
foot pad

11 x4

 


Fixed adhesive
foot pad

OR


PARTS LIST

A x8




(M6)

 B x4



(M8)

 C x4



(M6)

D x6

 


(M8)

E₁ x1




E₂ x4



(M5)

 F₁ x4

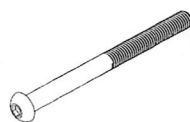

F₂ x4



 
F₃ x4



G₁ x1



G₂ x1



H x2



(M5)

I x4



J x1



(4mm)

K x1

 


(5mm)

S











Screws for TV

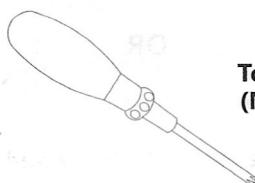


**Tools Required
(Not included)**

        1

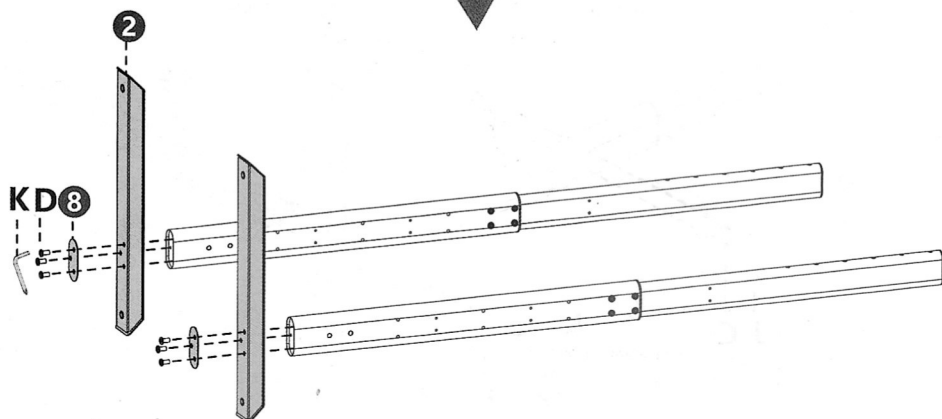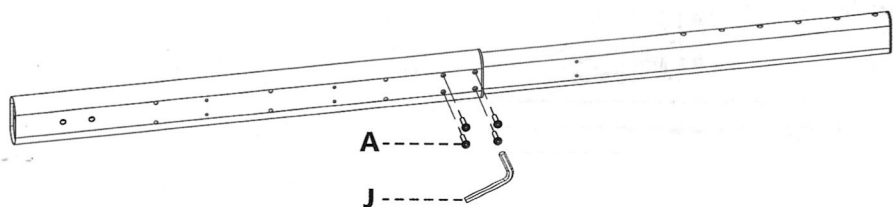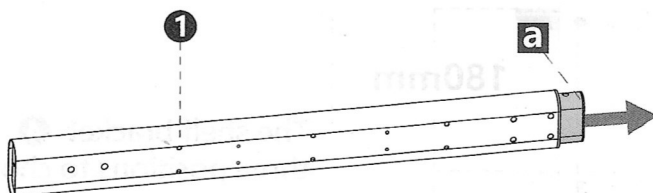


3

9 x1 	B x2 	J x1 
	C x2 	K x1 

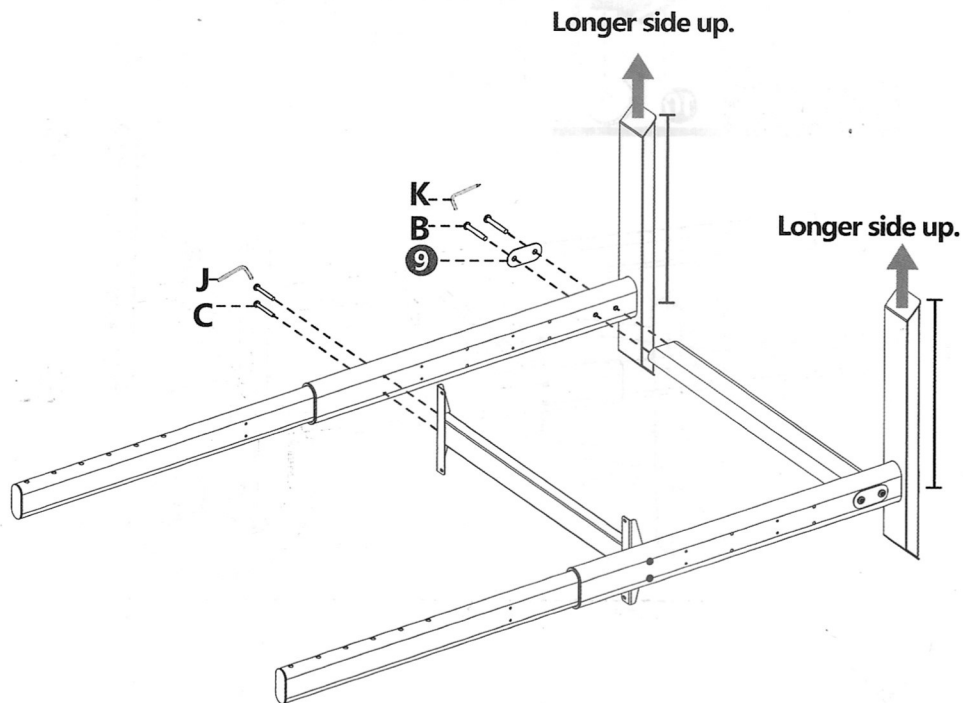 

3

9 x1		B x2 	J x1 
		C x2 	K x1 

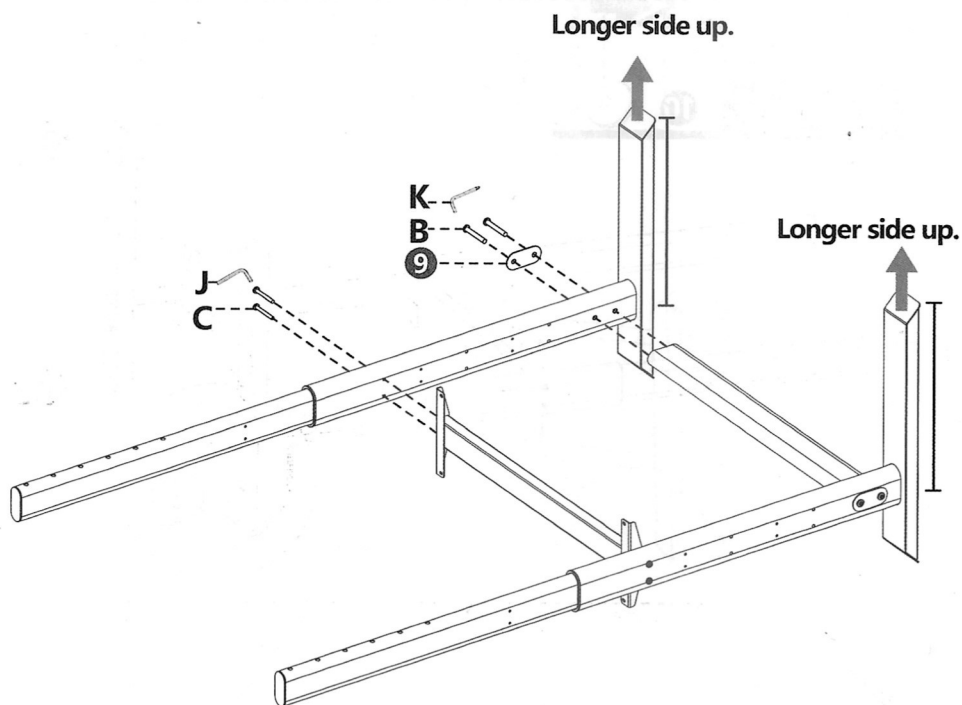 

4

10 x4



11 x4



Two types of foot pads for selection:

10 -- adjustable foot pads.

11 -- fixed foot pads.

10





Choose one.

11



Option 1

  10


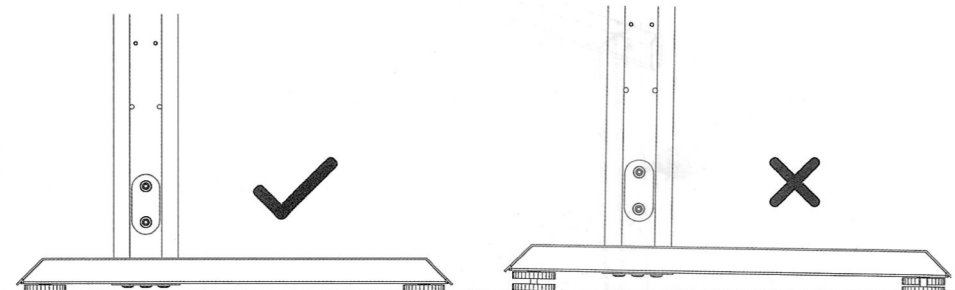
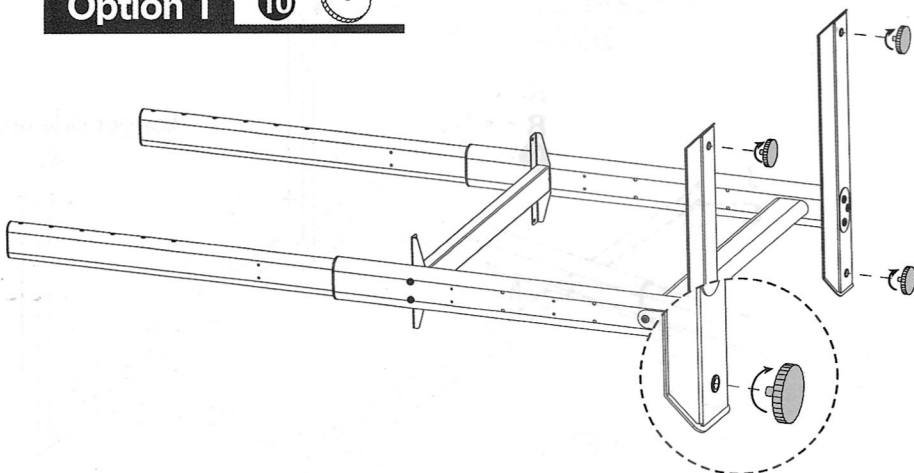


After installation, please check if all four foot pads are on the same plane.
If uneven, please adjust them to the same height.

5



Option 2

   11

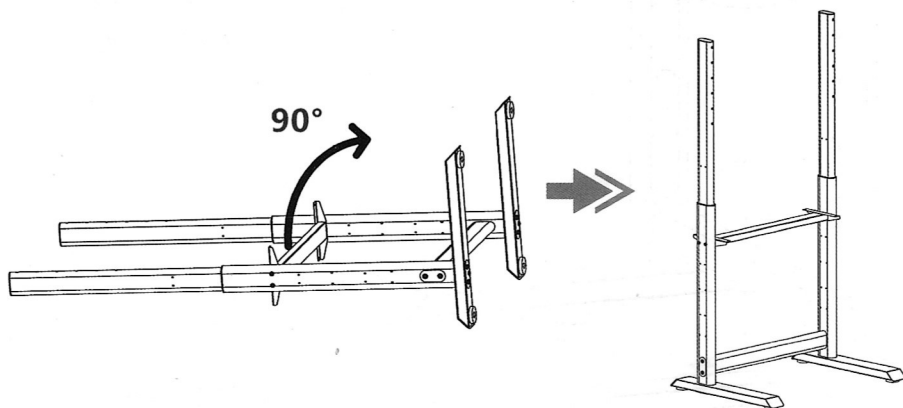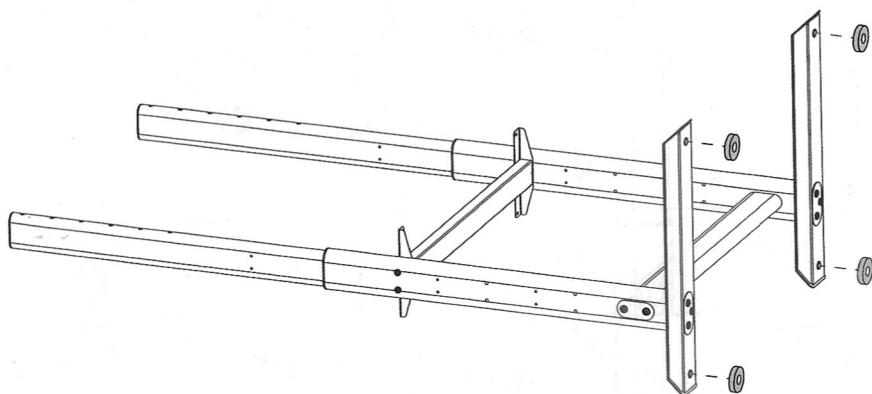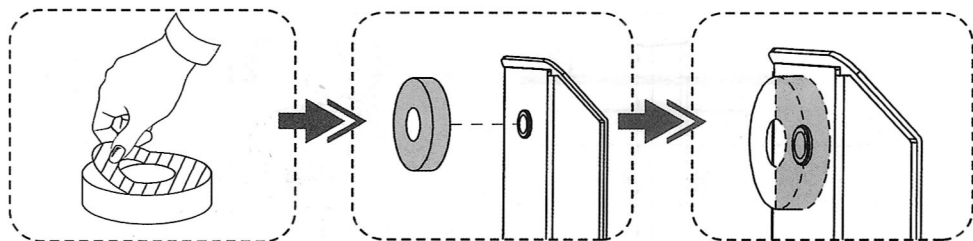

6

5 x1		E ₂ x4	
E ₁ x1		K x1	

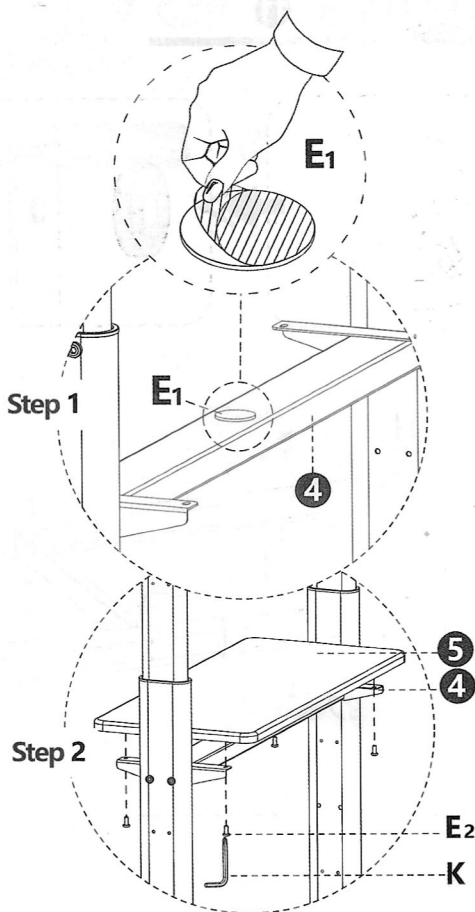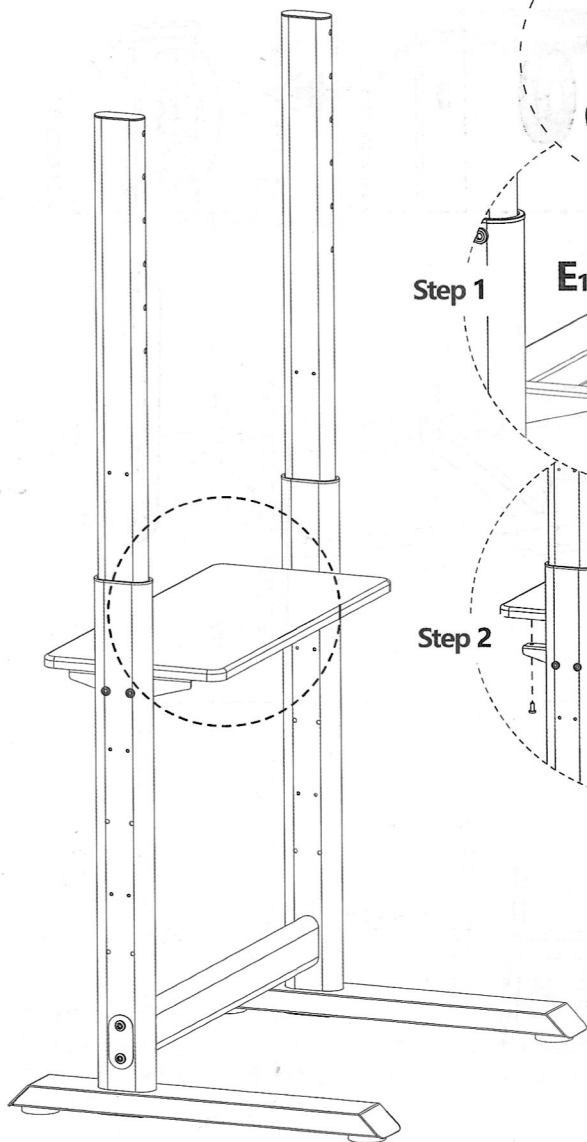  

7

6 x1



F₁ x4



 
 
 
 
 
F₂ x4



F₃ x4



K x1

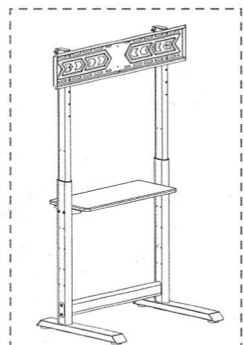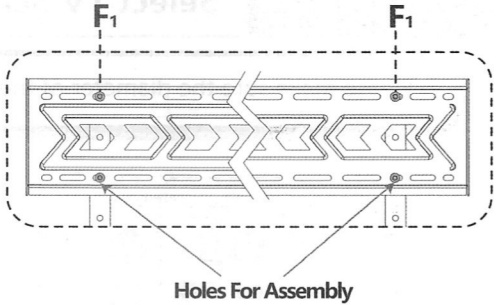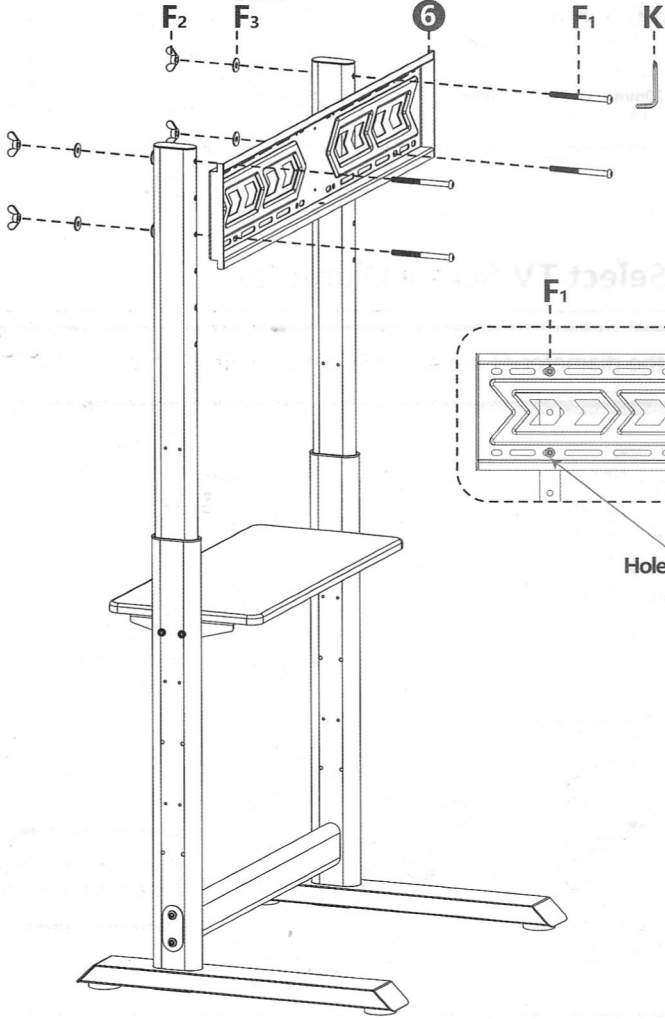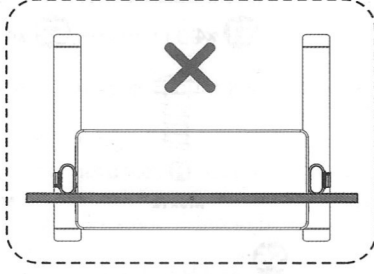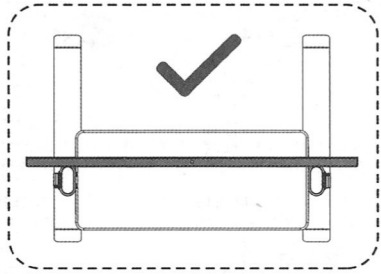

S0 x4



M4x30

S1 x4



M6x12

S2 x4



M6x35

S3 x4



 
M8x16

S4 x4



M8x50


S5 x4



S6

20mm
x45mm
x8

 7 x2




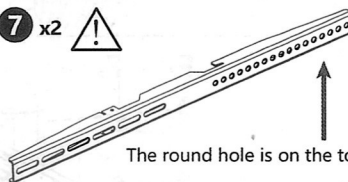


The round hole is on the top

STEP 1

Select TV Screw Diameter

    Please make sure the diameter of the screw **S0-S4** are suitable for your TV.

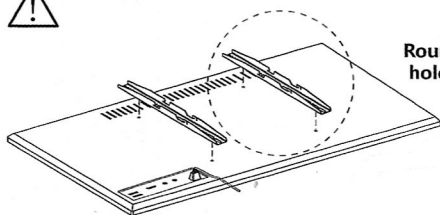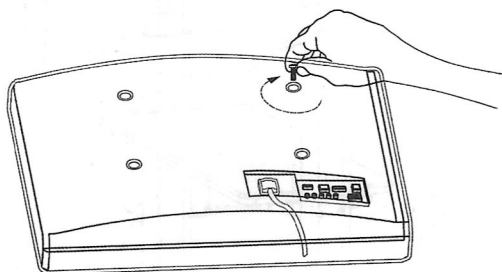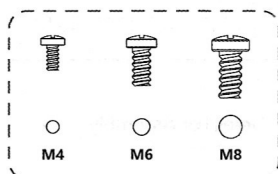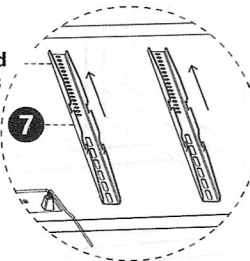Round
holesThe round hole
is on the top .

STEP 2

Measure VESA For Your TV

1. What does the VESA standard mean?

The VESA standard is a standard for attaching flat screens / LCD / monitors / televisions to monitor mounts or TV mounts.


Prerequisite is that both the monitor / TV and the monitor mount have the same VESA standard.

2. Look at the back of your TV/monitor for threaded holes.

Measure the horizontal distance **W** and vertical distance **H** of the screw holes (center to center).

W x **H** should comply with the VESA standard of TV stand listed in below sheet.

Notice: If the TV/monitor is not compatible with VESA, it can still be attached to the desired bracket by using VESA Adapters(not included and should be purchased separately).

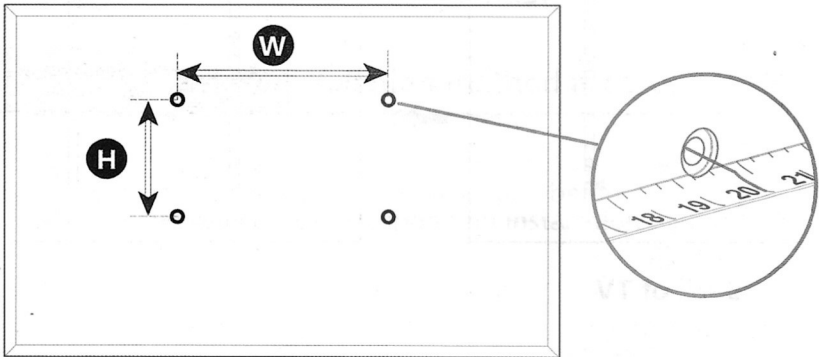

TV

Units:mm

W	x	H	
100	x	100	✓
200	x	100	✓
200	x	200	✓
300	x	200	✓
300	x	300	✓
400	x	300	✓
400	x	200	✓
400	x	400	✓
600	x	200	✓
600	x	400	✓
800	x	200	✓
800	x	400	✓
800	x	600	✓

Units: inch

W	x	H	
4.0	x	4.0	✓
7.9	x	4.0	✓
7.9	x	7.9	✓
11.8	x	7.9	✓
11.8	x	11.8	✓
15.7	x	11.8	✓
15.7	x	7.9	✓
15.7	x	15.7	✓
23.6	x	7.9	✓
23.6	x	15.7	✓
31.5	x	7.9	✓
31.5	x	15.7	✓
31.5	x	23.6	✓

 
VESA standard of TV STAND

STEP 3

Holes Selection of Brackets


When **H** is shorter than **600mm**, different TV heights can be set based on bracket hole positions, as shown in the following figure.

Choose the lower holes to lower the TV height

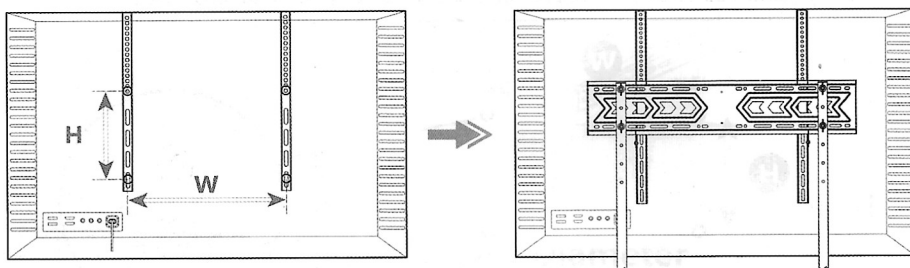

Back of TV

Choose the upper holes to higher the TV height

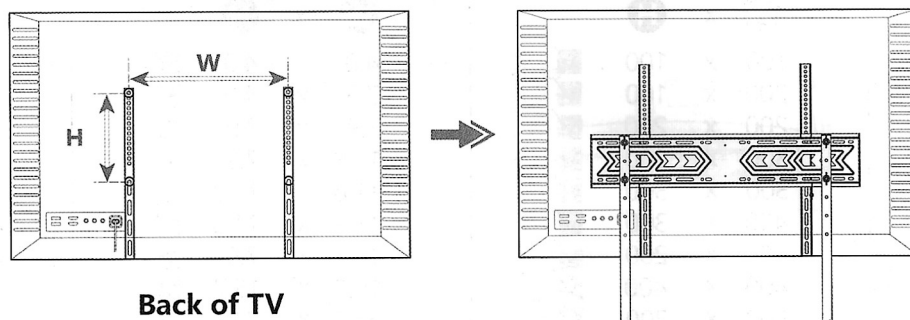


Back of TV


STEP 4

Select TV Screw Length


When attaching brackets to the TV, be careful not to over tighten screws and be sure that screws don't bottom out in the mounting holes. Please make sure the length of thread engagement at least 6 turns or 5/16 inch (8mm).

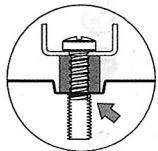


⊗ Too Short

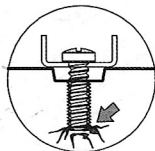

⊗ Too long

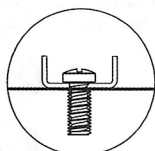

✓ Correct

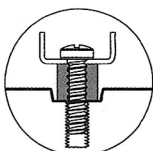


✓ Correct


STEP 5

Select installation method according to TV

 
⚠ Please confirm the style of the TV backplane before installation and select the corresponding installation method

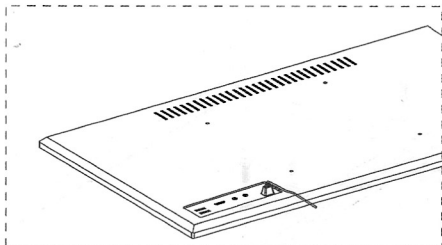

 
For flat back TV,
please choose "Option 1"

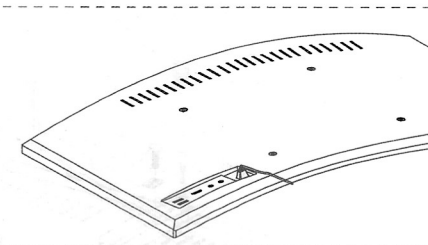

 For round back TV or Curved TV,
please choose "Option 2"

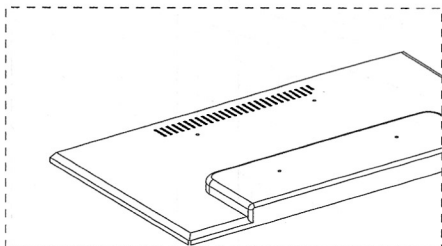


 For TV with A "Bump",
please choose "Option 3"

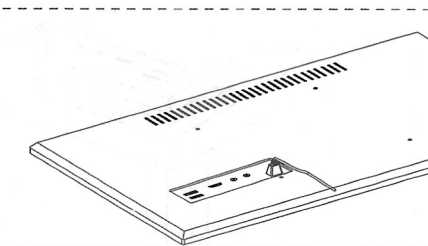


For potential cable blockage,
please choose "Option 4"

 Option ① (For Flat Back TV)

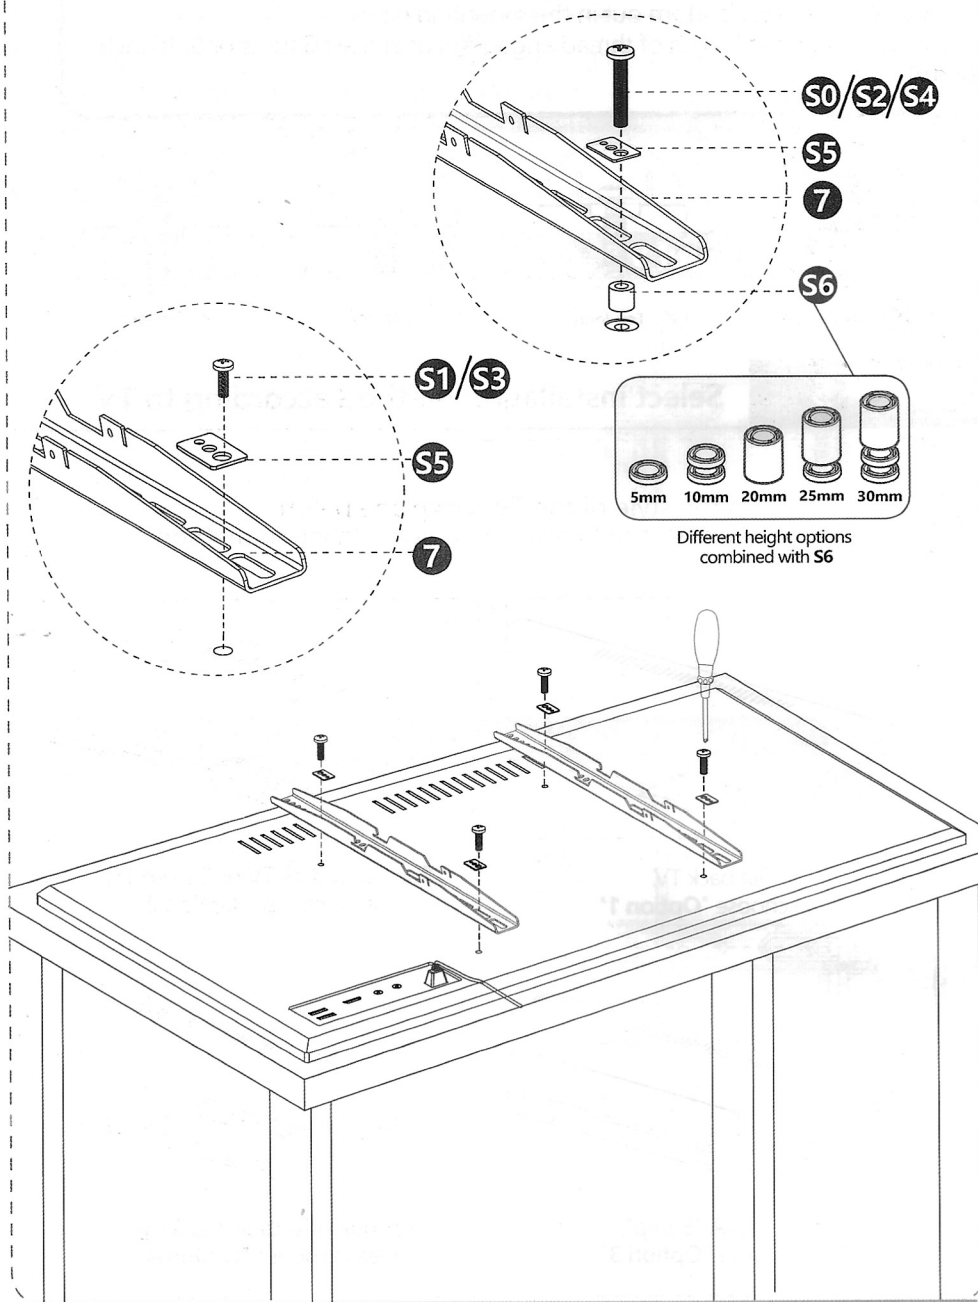

 Option 2 (For Round Back TV or Curved TV)

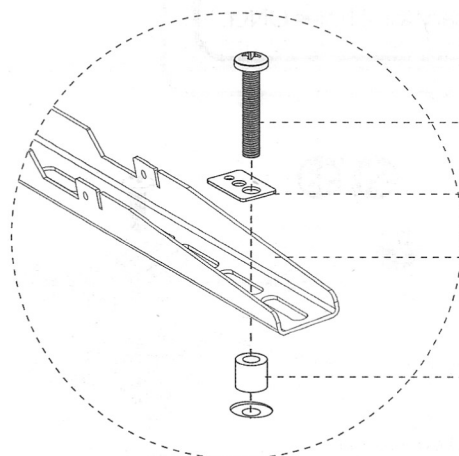



S0/S2/S4

S5

7


S6

  Different height options
combined with S6

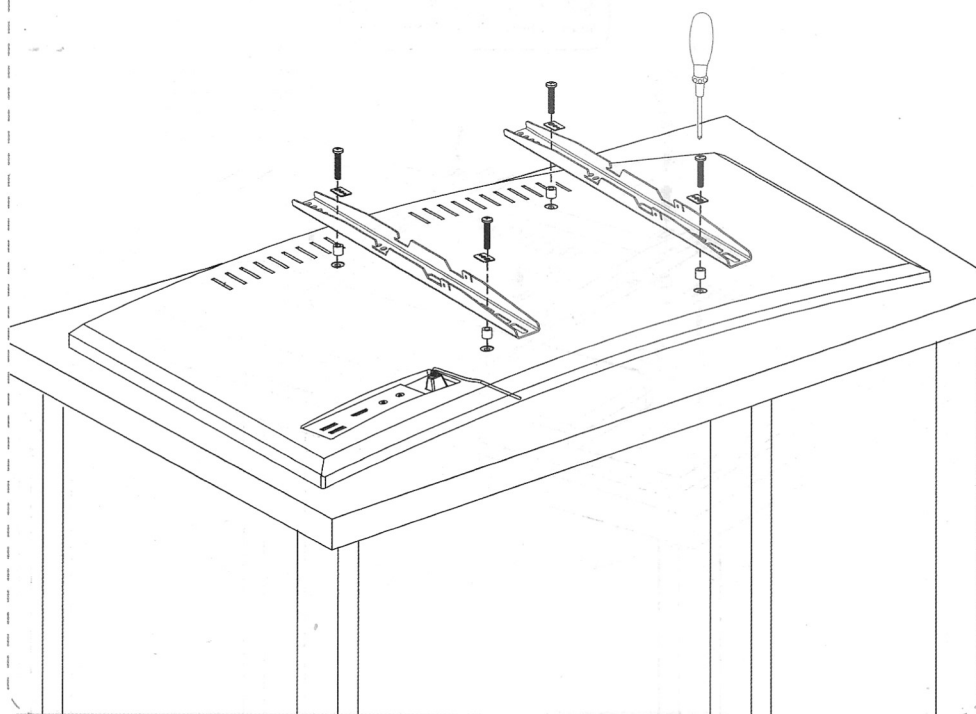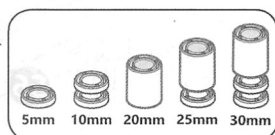

Option 3 (For TV with A "Bump")

 Spacers may be necessary for 2 holes ONLY.

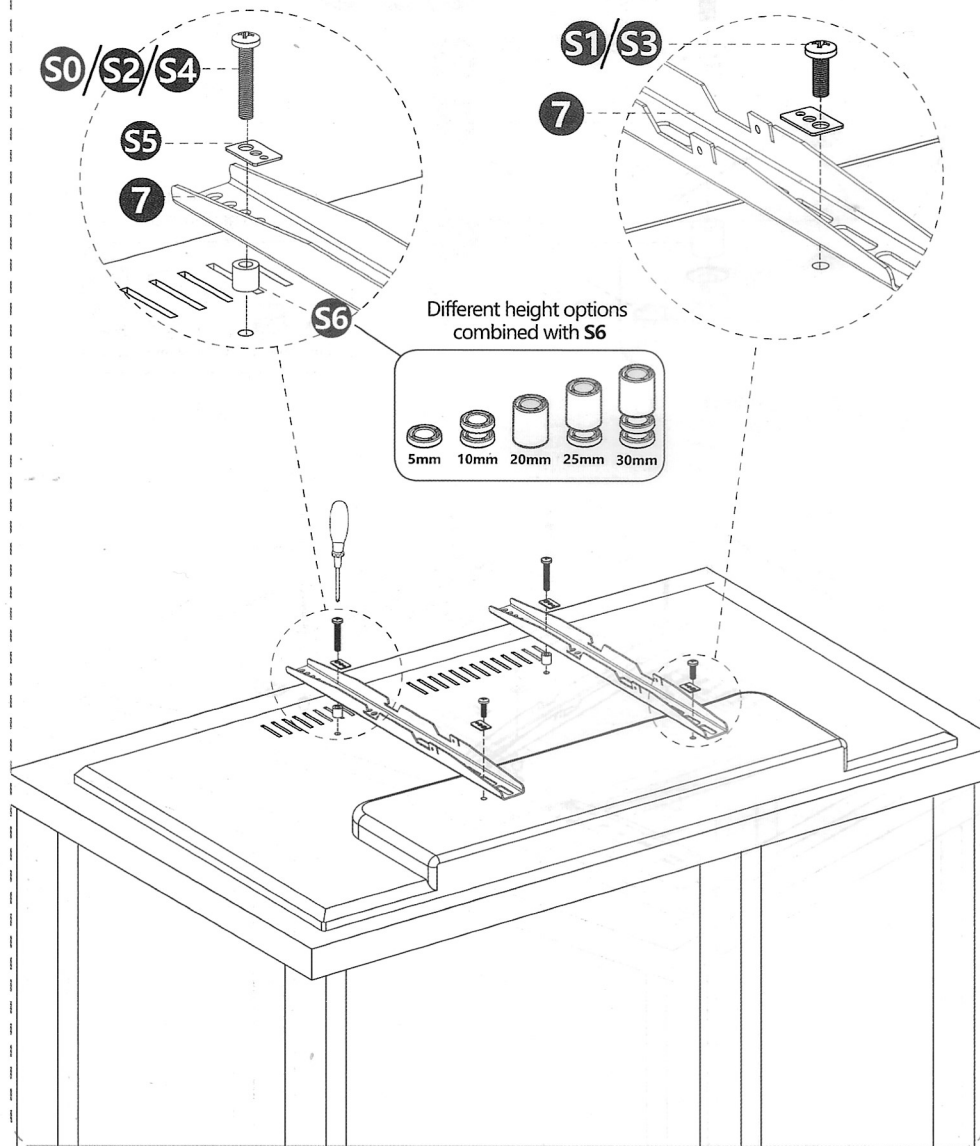

Option 4 (Potential Cable Blockage)

 
Spacers may be necessary when cables or plug/outlets are blocked by brackets.

S0/S2/S4


S5

7


S6

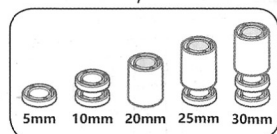

 
Different height options
combined with S6

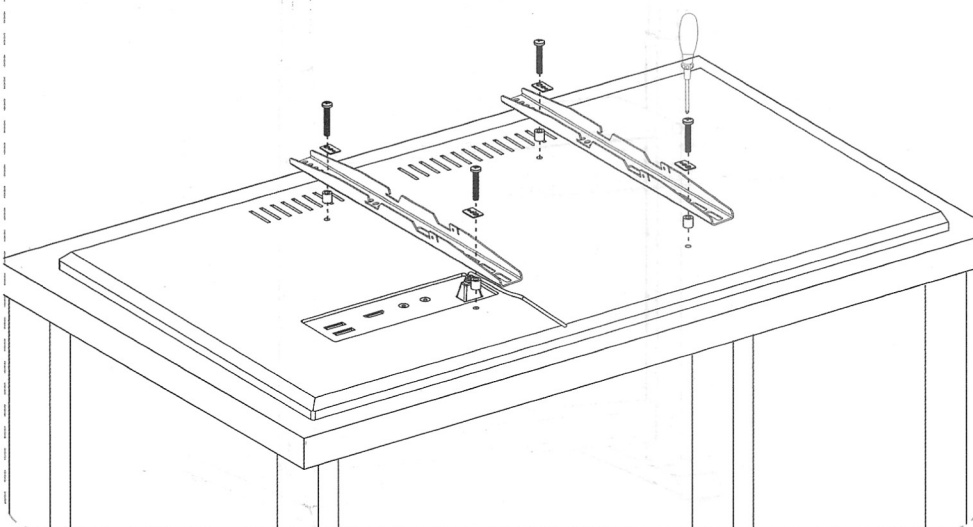

9

 G₁ x1

 H x2


G₂ x1

K x1




Insert safety lock **G₁** and **G₂** into the bottom of part **7** and fix them with screw **H**.
Please lock the TV before using.

 Note- There are two ways to install safety lock **G₁** and **G₂**, inside or outside installation, each part **7** need one safety lock (**G₁** or **G₂**)

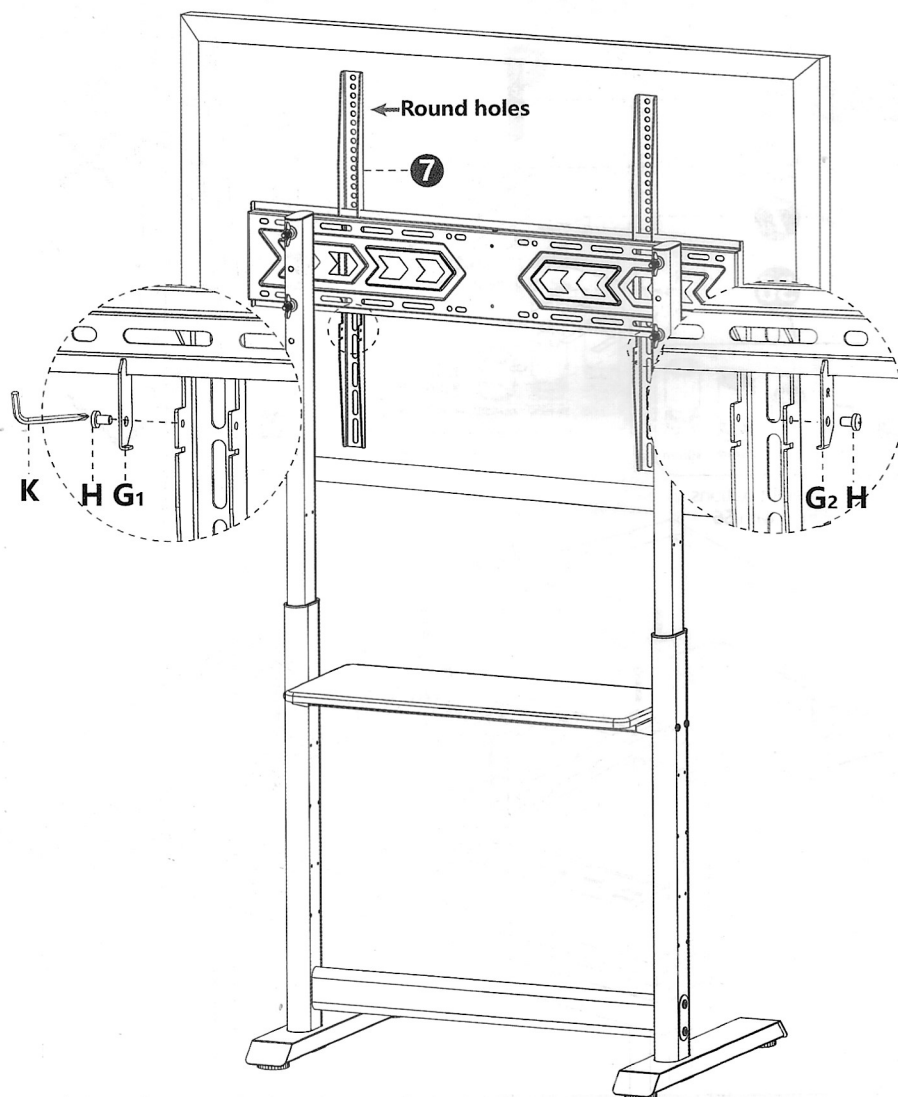




1. Install cable management clip **I** to the side holes of part **1**, select the inside or outside installation according to the use requirements.
2. Open the buckle of cable management clip **I**, put the cables and wires into it, then close the buckle to fix, so that keep the stand tidy.

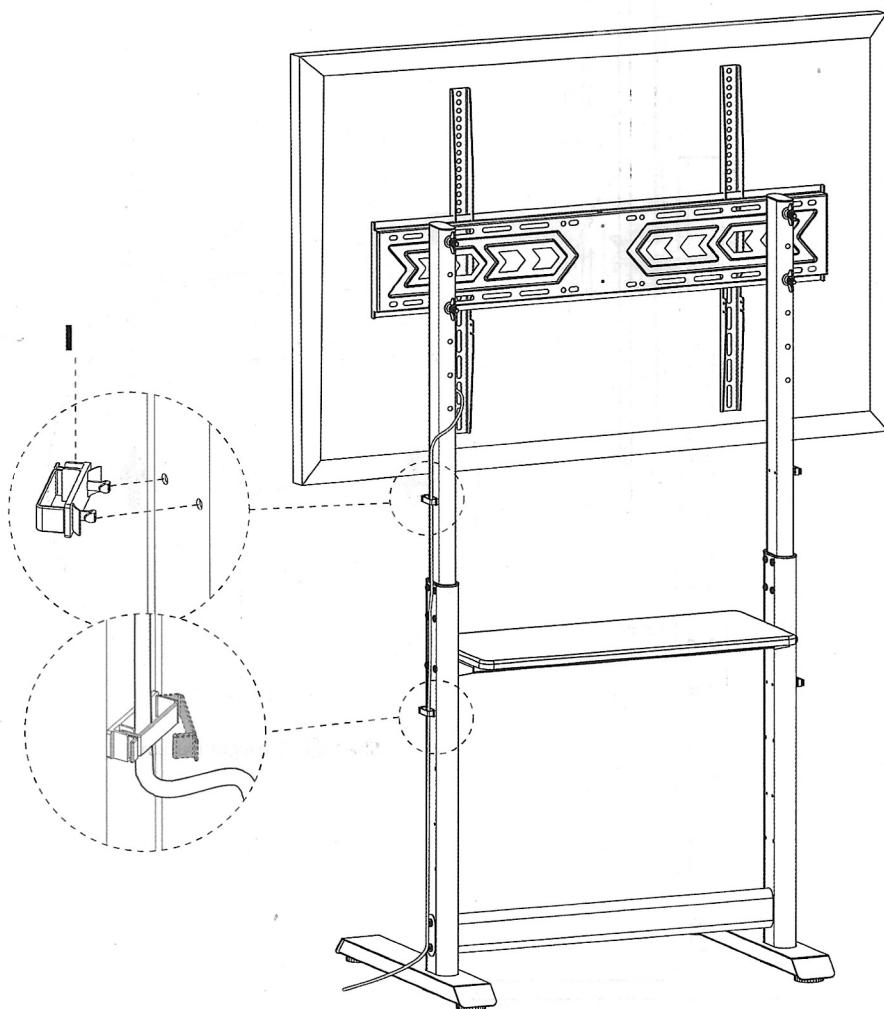

USERS GUIDELINE

Shelf Height Adjustment



Shelf ④ can be adjusted with 3 height options based on your needs. And the height difference between each position is 180mm.

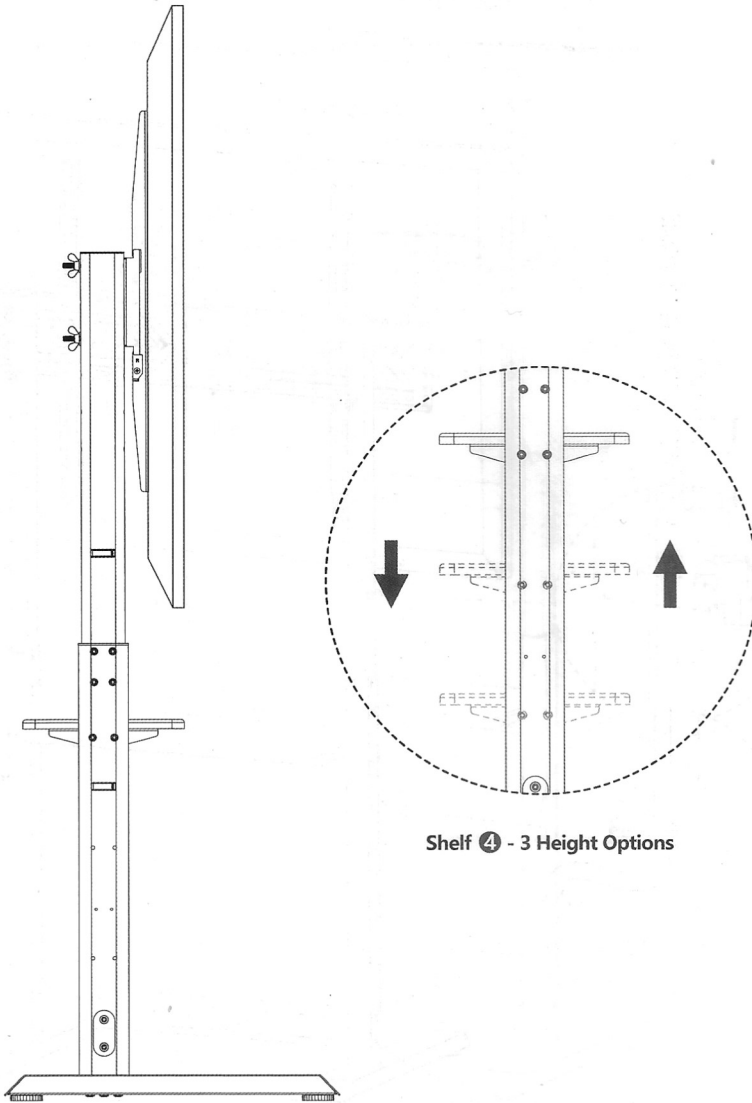

Shelf ④ - 3 Height Options

Stand Height Adjustment - TV plate


- 1、 Please take off the TV from the stand then select the proper height by yourself.
- 2、 TV plate ⑥ height adjustment is 60mm(2.3 inch) per level
- 3、 Attach the tv to the TV plate ⑥ again, assemble safety lock **G**₁, **G**₂ and tighten screws **H** on the bottom of brackets to secure the tv to the stand

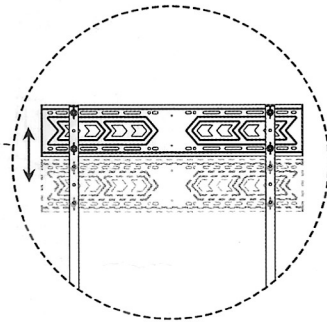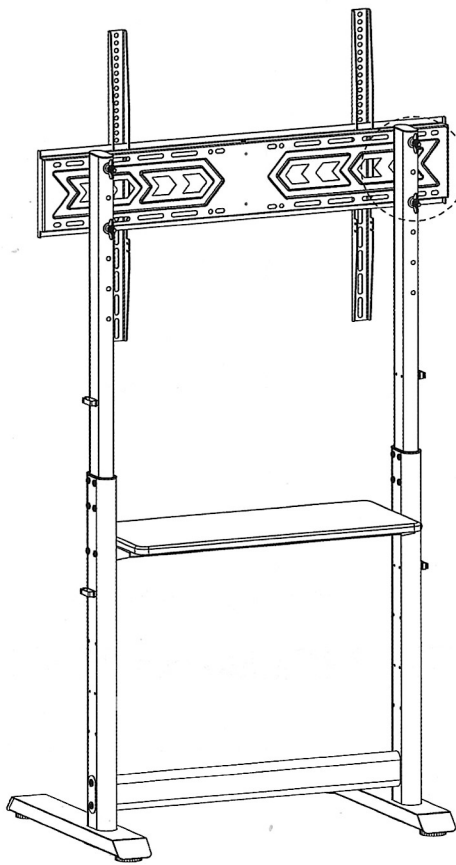

TV plate ⑥
4 levels optional for height adjustment

Stand Height Adjustment - TV plate

 1. Loosen the screws on the TV plate.
2. Adjust the height of the TV plate to the desired position.
3. Tighten the screws on the TV plate.

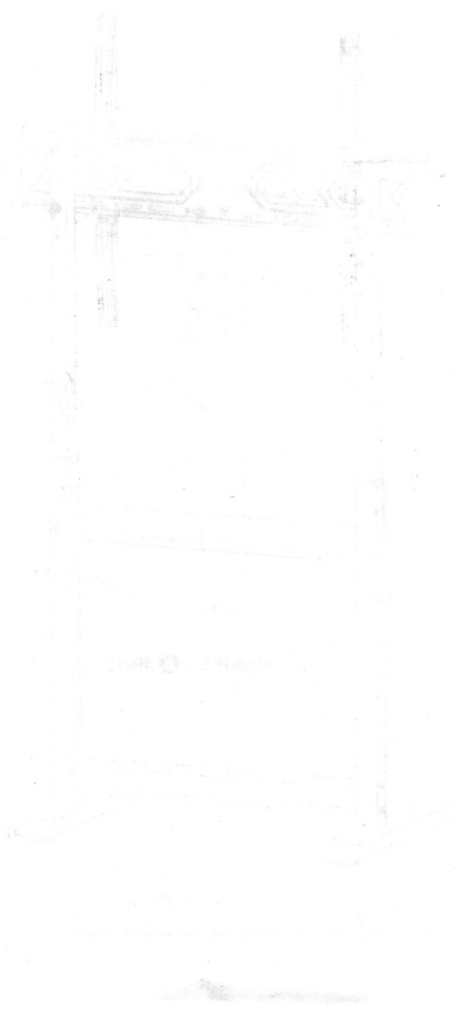

TV plate